


FRIEDRICH GO WiFI Setup Guide Dual Hose Portable

Let's Get Started! 1. Check for a 2.4 Ghz connection and make sure the device is connected to that network.

2. Download the **Friedrich Go** App on your smartphone.

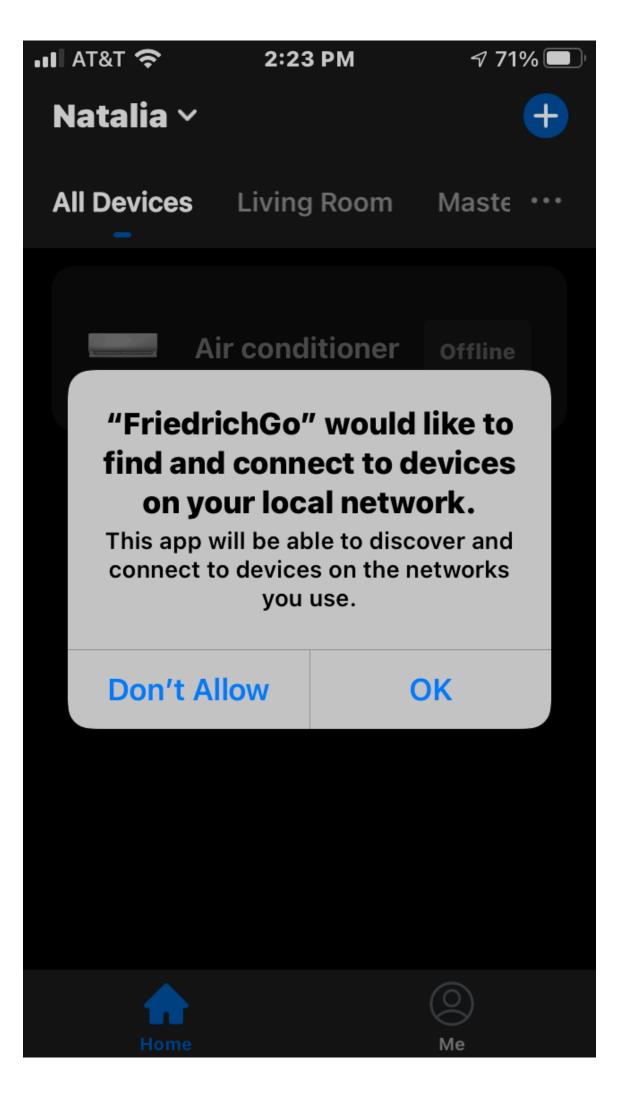


3. SIGN UP YOUR USER ACCOUNT

Once you download the App, you will need to create an account. Click the **Sign up** button to begin the registration process. You can register with your email

address.

SIGN IN TO YOUR USER ACCOUNT

Once you have created an account, click the **Sign In** button to sign in to your account using the email that was used for registration. You can update your home name and select the rooms.

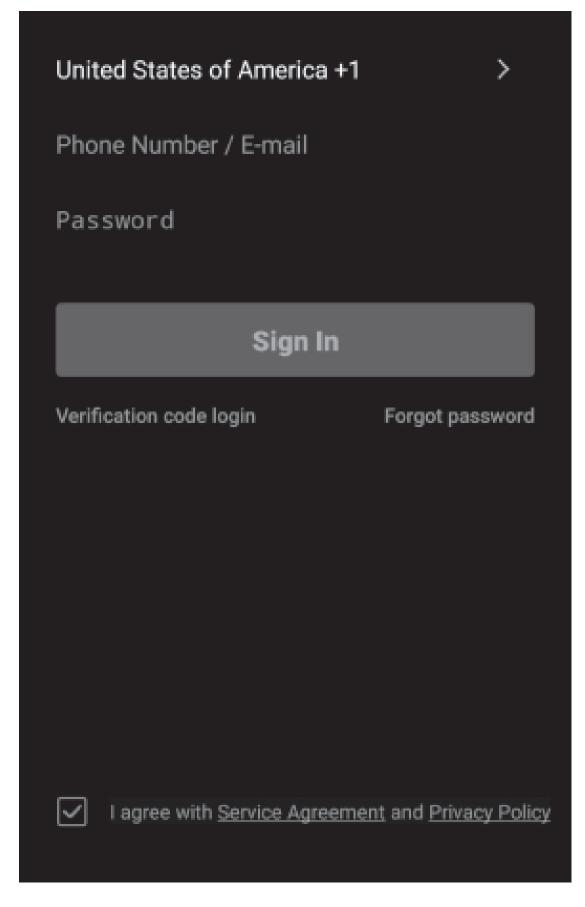

Follow these below steps to retrieve a forgotten password:


- 1. Press the **Forgot password** button to replace.
- 2. Type in the registered email address and press the **Next** button to continue.
- 3. You will receive a verification code to continue. Type in the code received and set a new password. Press **Confirm** to finish.


Follow the directions below to add an AC to your FriedrichGo account.


This will allow you to control your units from your mobile app.

NOTE: You have 5 minutes to complete this process. If you exceed 5 minutes, you will need to reset the Wifi Mode by holding the power button for 5 seconds.

1. Press the + and click the **Portable Unit** to connect.

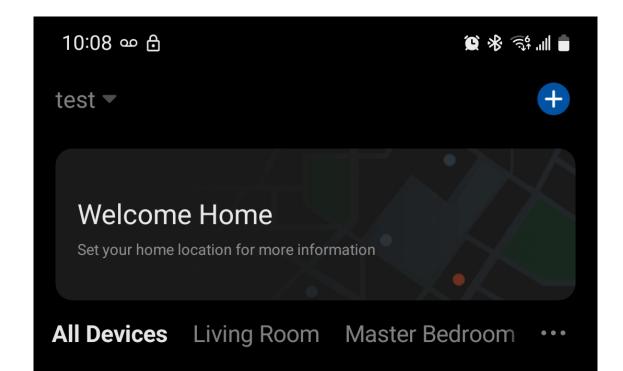

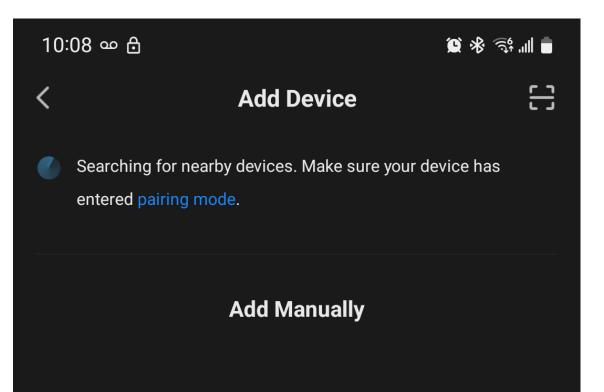

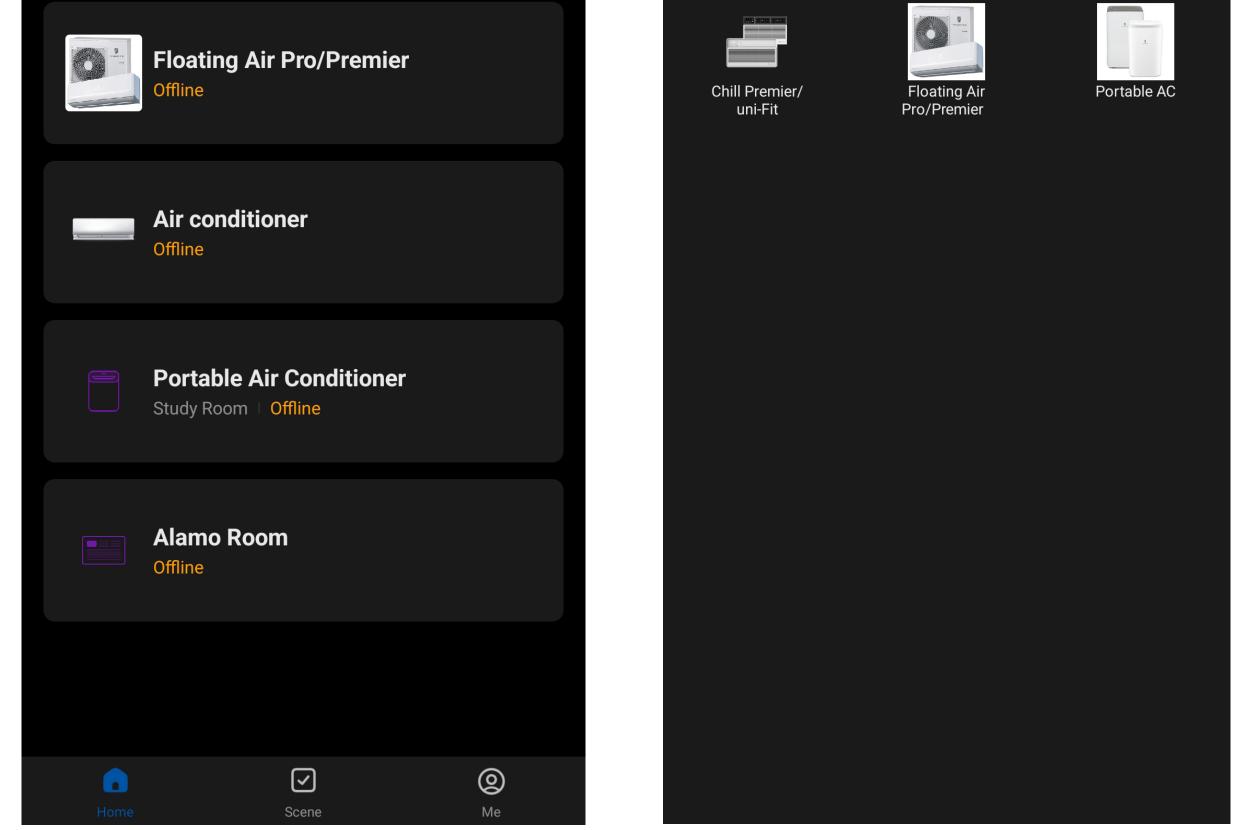

2.Setup Modes:

CF Mode-When setting up your AC unit using a Wi-Fi connection using the CF mode, the AC unit being connected for Wi-Fi operation will automatically search for an available wireless network and connect automatically when the setup directions are followed. The unit and device will be synced together afterwards.

(Reminder-The FriedrichGo App only works on 2.4 GHZ networks)

Press and hold the On/Off button again for 5 seconds, when the Wifi indicator is blinking SLOWLY, it is switched to AP mode. Choose the right mode(CF or AP). The default set-up mode will be CF mode when first starting the AC unit.

AP Mode- If your AC unit does not

connect to the mobile device through the wireless network using the setup instruction in CF mode, you can use AP Mode instead.

ADD THE AC UNIT TO THE WIRELESS NETWORK USING "CF MODE"


NOTE: CF Mode is indicated by a rapid blinking WiFi Matter Matte

1. Select the network you wish to connect to, enter the router password and press "Confirm"to continue.

Enter Wi-Fi Password

100%


Only support 2.4GHz Wi-Fi network

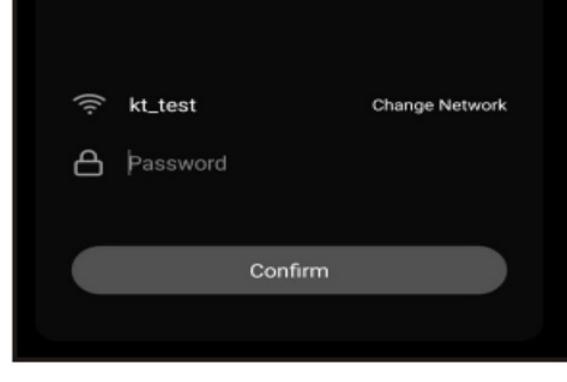


2.The App and AC unit automatically defaults to CF mode upon start up. It is usually not necessary to reset the device. Press "Next Step" to continue.



DB dual hose model. Continue to Next Step directly when WIFI indicator on the control panel is blinking RAPIDLY after the device is power on Or Press On/Off button on the control panel continuously for 5 seconds. Once WIFI indicator is blinking RAPIDLY, continue to Next Step

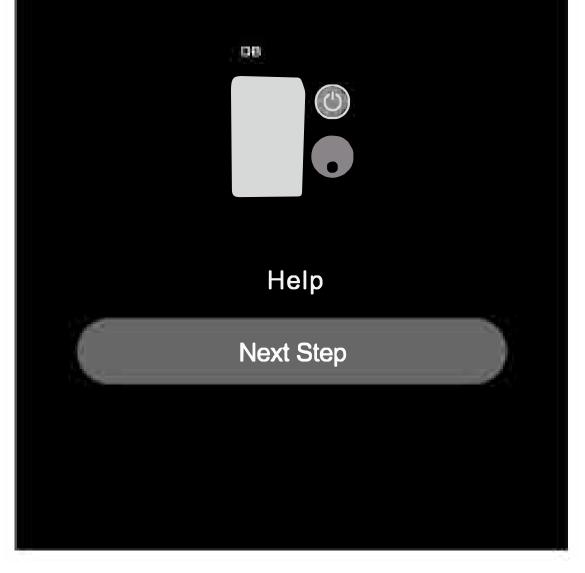


3. After connecting to the wireless network, the Friedrich GoApp software will automatically try to pair the AC unit. It may take 10-15 seconds to connect the AC to the network.

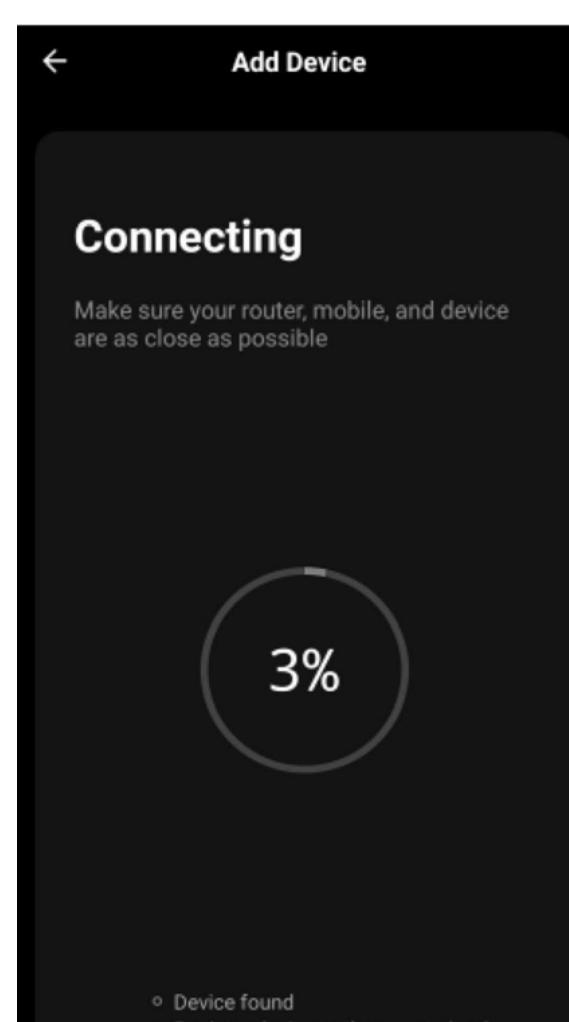

- Register device to the smart cloud
- Initializing device

4. After successfully pairing the AC unit to the network, the page will display as shown.

5. You can rename the AC unit by pressing the pen remark.

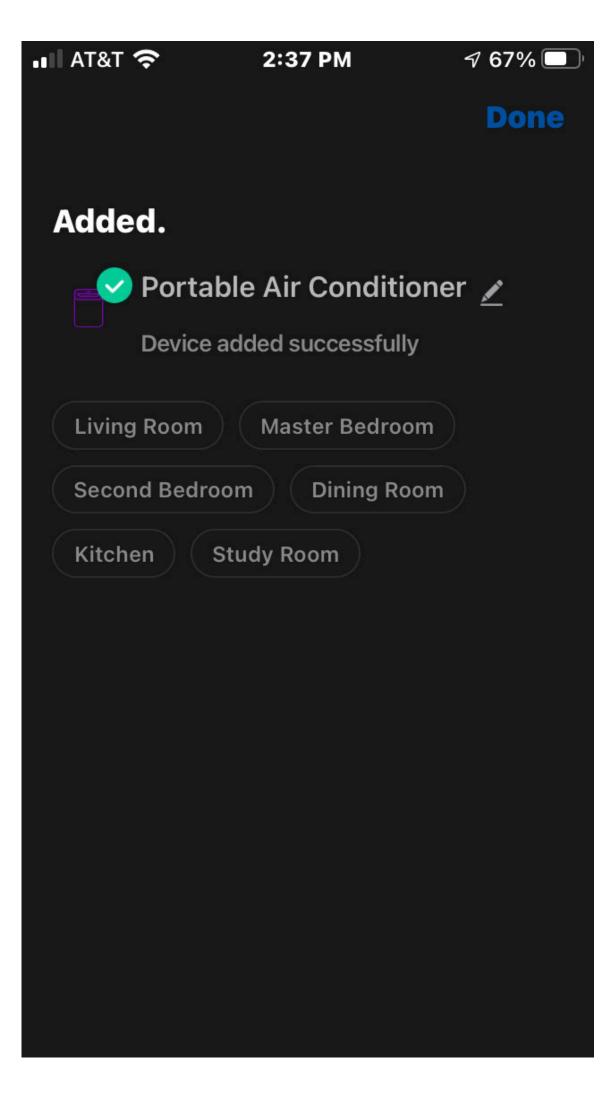

Note: At any time you need to reset Wifi

connection, press and hold On/Off button on the control panel for 5 seconds, when the wifi indicator is blinking RAPIDLY, it is at CF mode. Press and hold On/Off button again for 5 seconds, when the Wifi indicator is blinking SLOWLY, it is switched to AP mode. Choose the right mode(CF or AP) according to the blinking and go to next Step.

ADD THE AC UNIT TO THE WIRELESS NETWORK USING "AP MODE''

If connections to the wireless network fail using the "CF mode", you can connect using the "AP mode" (using the AC unit as a mobile hotspot)

Note: If at any time you want to change the AC unit wireless connecting from CF mode to AP mode, please follow as below.

Hold Power button for 5 seconds.


If you want to go back to CF mode, repeat the above steps again.

1. On the App page indicating CF mode, click "AP mode" in the top, righthand corner.

2. AP should show on the page as illustrated. Press "Next" to continue.




panel continuously for 5 seconds-Orce WIFI indicator is blinking SLOW_Y, continue to Next Step

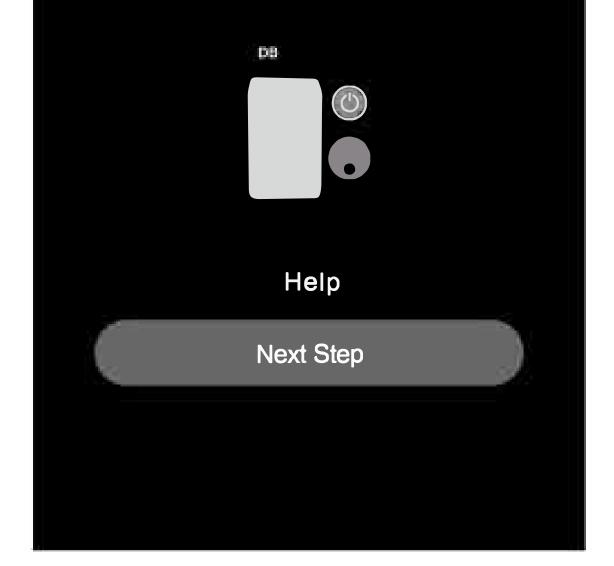

3. Select the Wi-Fi network you are trying to connect to. Type in the password and press "Confirm" to continue. AP Mode
 Enter Wi-Fi Dassword
 Only support 2.4GHz Wi-Fi network
 P-LINK Change Network
 Password

4. Tap on "Go to Connect" to open your mobile device settings to get to Wi-Fi connections.


5. Friedrich-XXXX, Smartlife-XXXX, or SL-FriedrichGo-XXXX should show as an available network connection option.

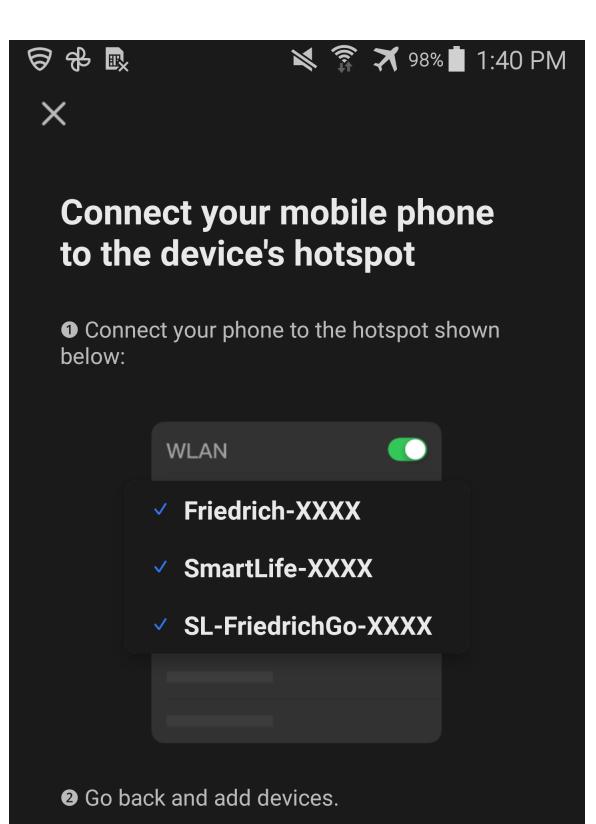

6. Connect to the **Friedrich-XXX Smartlife-XXX, or SL-FriedrichGo-XXXX** network.


7. After connecting to **Friedrich-XXXX Smartlife-XXXX, or SL-FriedrichGo-XXXX** network using the AC unit's Wi-Fi adapter, return to the Friedrich Go App to resume setup.

8. The AC unit will automatically begin installing/syncing on the mobile device.

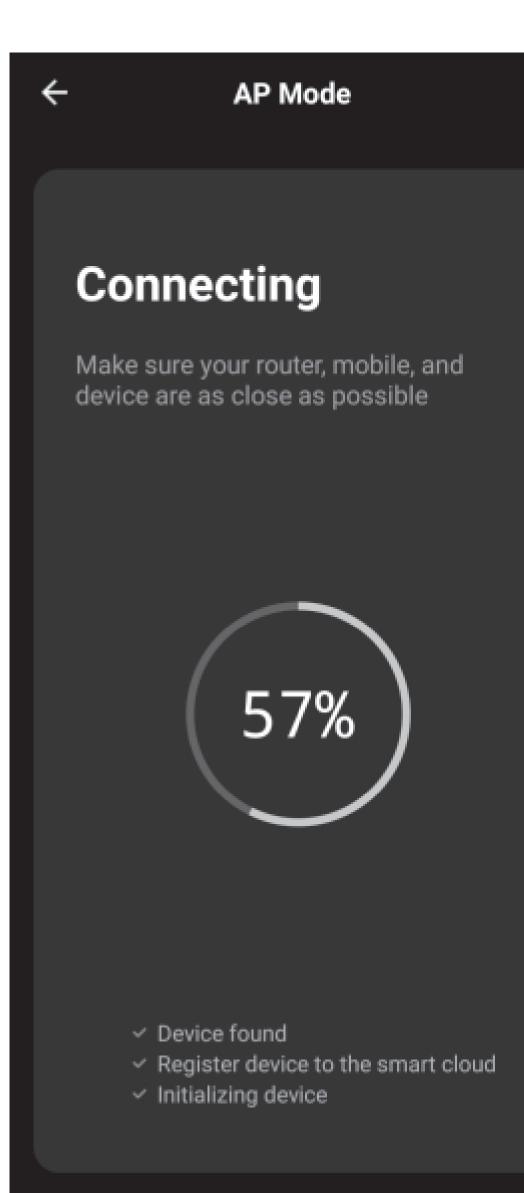

9. This may take
 10-15 seconds to
 connect the AC to the
 network.

10. When the connection is complete the FriedrichGo App on your mobile device

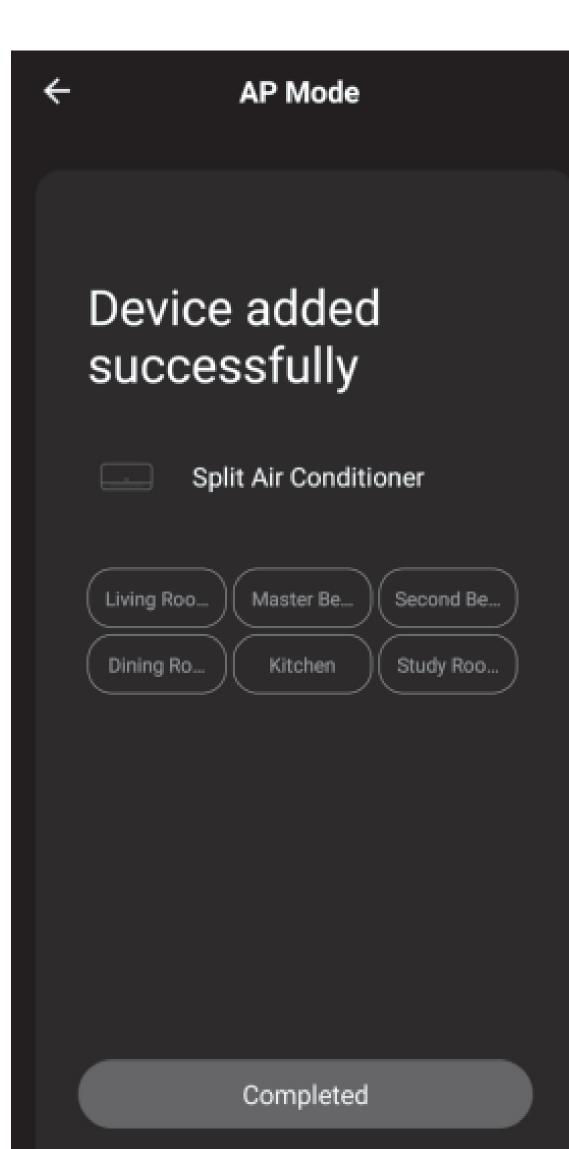

will show the unit as connected with a check mark as illustrated.

11. Once connected, you are ready to begin controlling your AC unit from your mobile device.


NOTE: Once your unit cycles on and off after using the AC unit's Wi-Fi adapter to connect, the AC unit will automatically pair with the network your phone is connected to.

12. If the setup connection fails,

••••• ?	9:41 AM	100%
<	AP Mode	

the App will display a warning. Press "Got it", to try the connection again or "View help", or go back to CF mode connecting.

Note: Any time you need to reset Wifi connection, press and hold On/ Off button on the

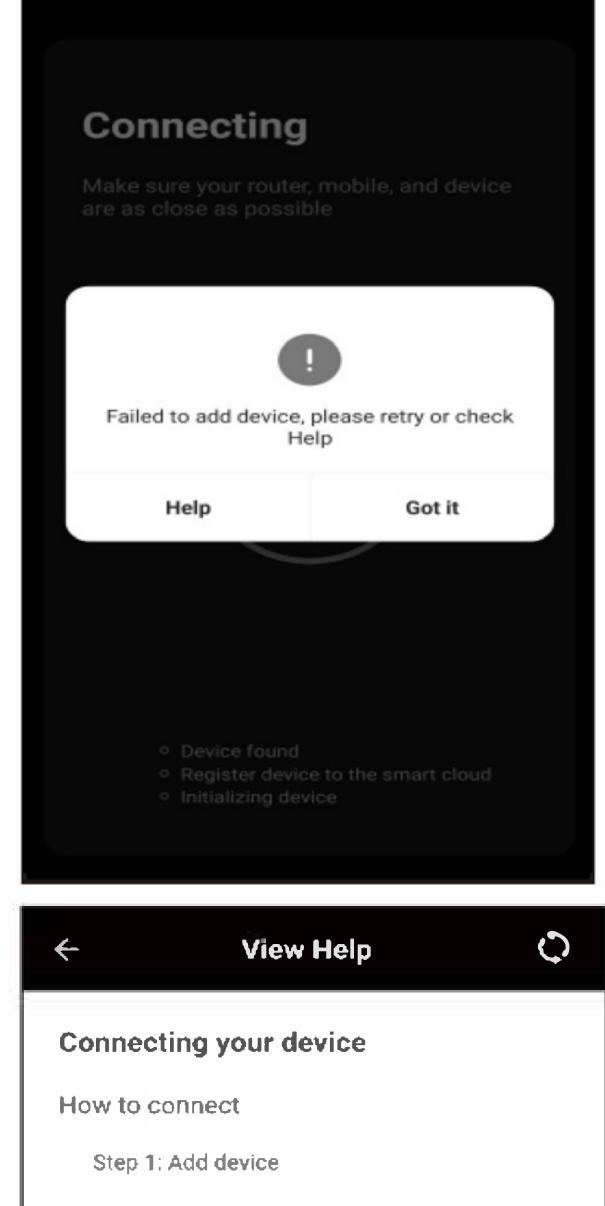

control panel for 5 seconds. When the wifi indicator is blinking RAPIDLY, it is in CF mode.

1. Connect your device to the power source and turn it on

2. Open the App, select "+" on the top right of the home page to add device. At the netpairing page, select the type of product

3 Make sure the device is in net-pairing status the Wi-Fi indicator light blinks quickly (twice a second)


- Please refer to the operation instructions found above the "Confirm indicator light blinks rapidly" button on "how to make the indicator light blinks rapidly".

 Please press and hold the power button for 5 seconds to reset the device if the product doesn't have a reset button;

How is the default mode used?

How to use compatibility mode?


AIR CONDITIONER CONTROL 1. Tapping the Air Conditioners name to enter the control mode. Tapping the ON/OFF button for power and then control your Air Conditioner remotely.

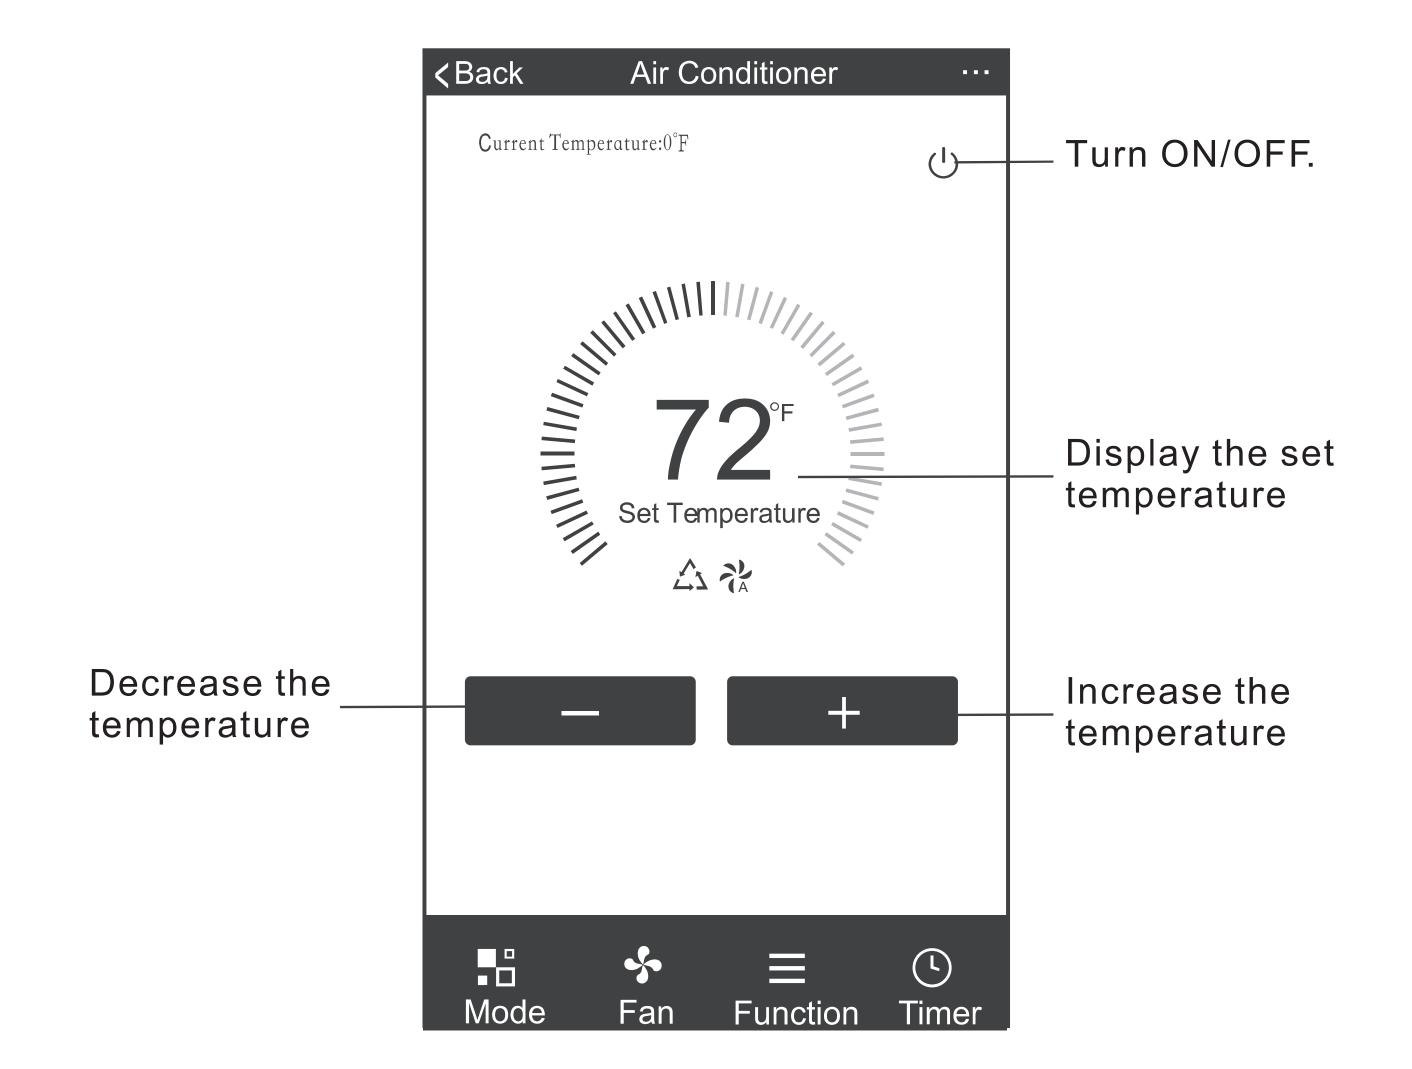


2. Adjusting settings for operation mode, Fan, Dry, Heat or




Cool. Tap the Mode button and choose the mode. The Heat mode on the App will not be functional or change any settings on AC units that are cool only.

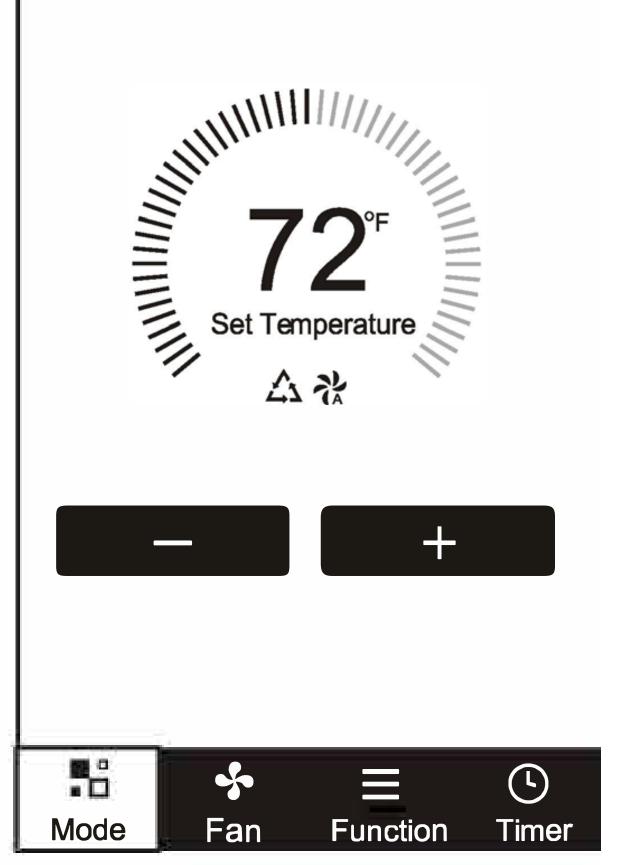

3. For Fan mode, click the "Speed" button and choose the fan speed you want.

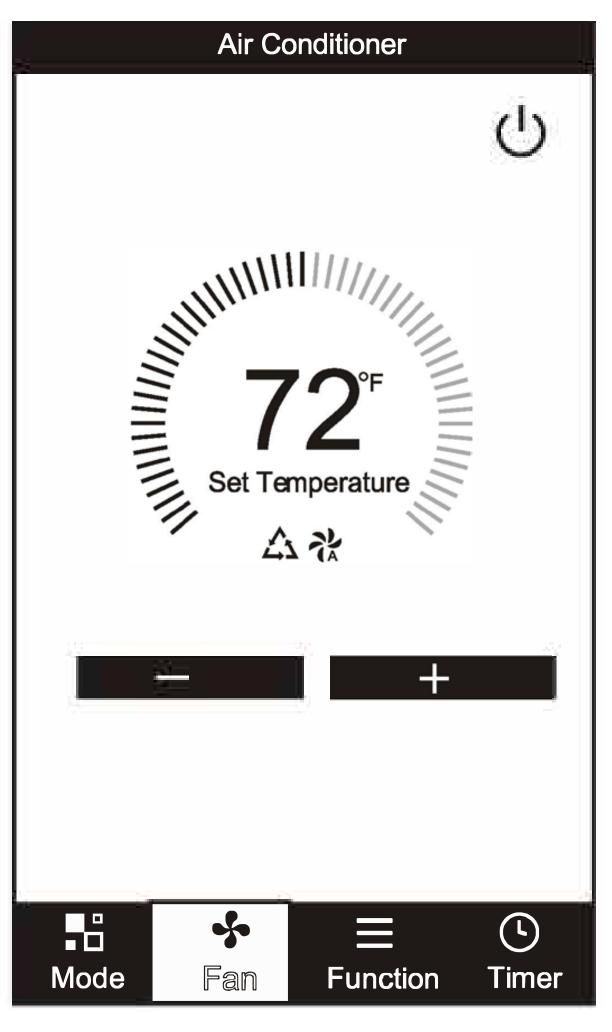

4. Other unit controls can be changed by selecting the "Function" button. By selecting the Function control, you can select the Sleep or Eco modes. In Sleep mode,

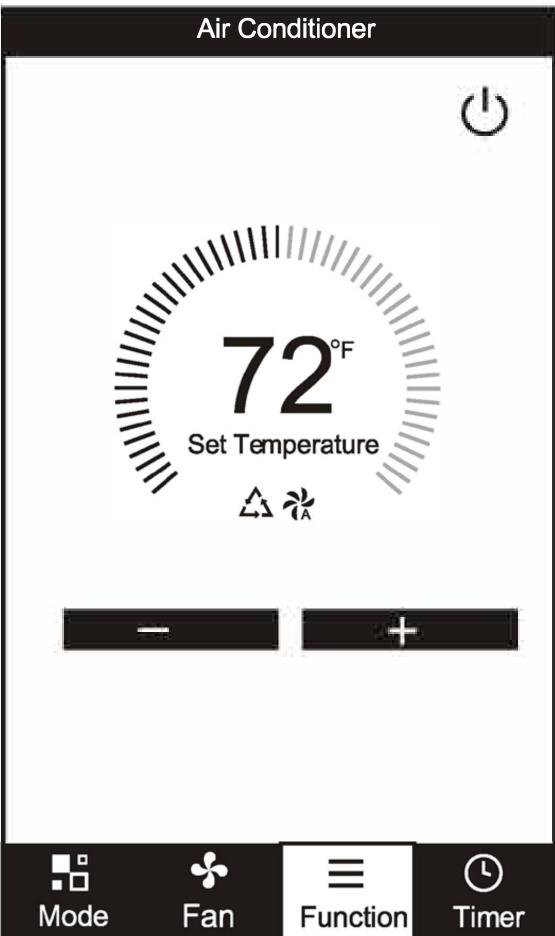


the fan speed will be set to low only.

	i anouon	


5. To set the Time Function: Tap **Timer**, the App will enter the timer setting screen. Display will show the schedules that were previously set. You can press to edit or add new timers.(Note: Timer is 24hr clock).

< Back	Air Conditioner	
		Ċ
	$\frac{1}{2} \int_{a} \frac{1}{2} \int_{a} $	

< Back	Add Timer	
Timer accura	cy is -/+30 seconds	
14:28 Sun, Mon, Tu Timer: ON Au	es, Wed, Thur to Auto	
14:28 Wed Timer OFF		

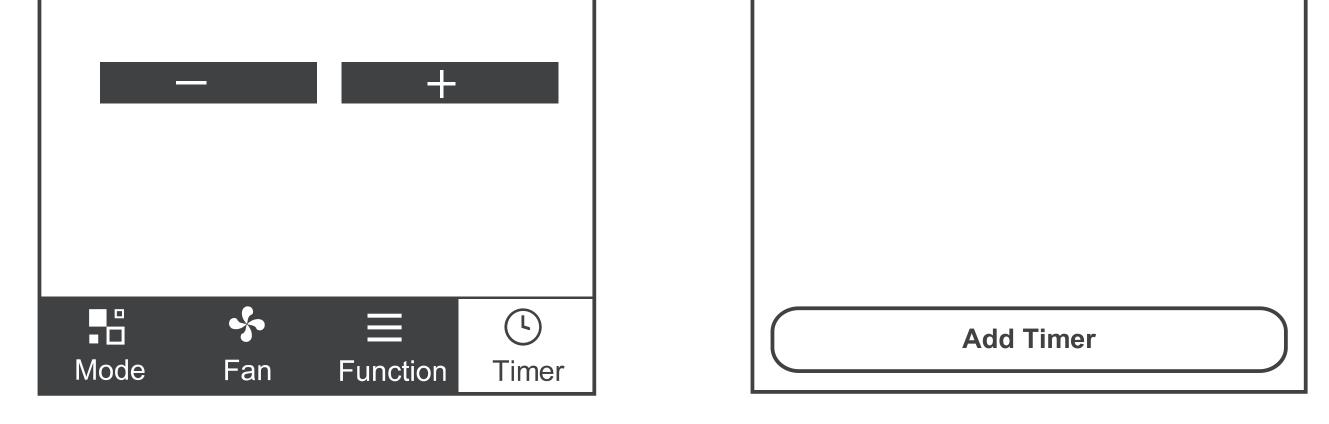

6. Click ON or OFF button to set Timer ON or Timer OFF.
You can set the: Hour, Minute, Operate Mode, Operate Fan Speed. You can also set a weekly timer. After you're finished setting the timer, click the button to Cancel or Save.

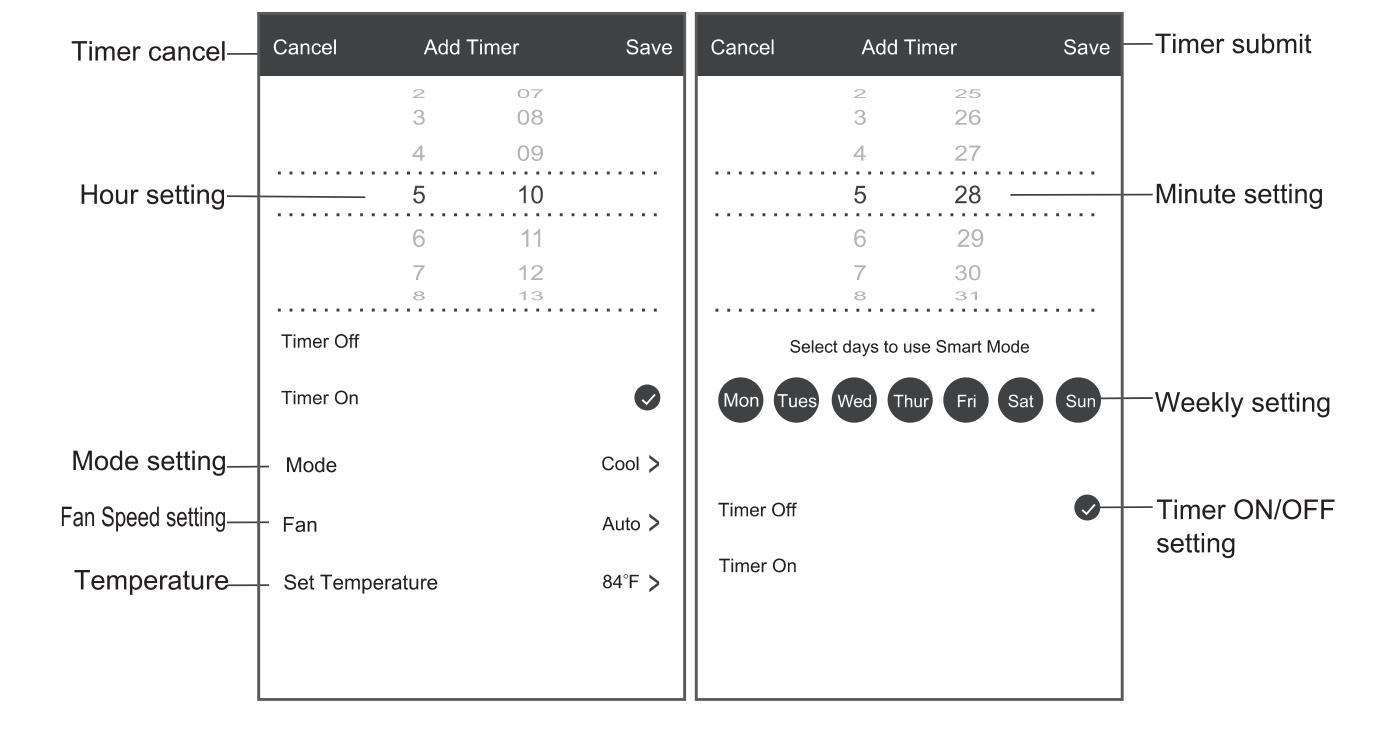



NOTES:


- Dry mode is preset to 4°F/ 2°C lower than room temperature, low fan speed and cannot be changed.
- Heat mode only applies to Heat Pump units.
- Fan mode is preset to 79°F/ 26°C and cannot be adjusted. -
- Auto mode is preset at 79°F/ 26°C for cooling or 72°F/ 22°C for heating and cannot be adjusted.
- Cool mode, Temperature settings can

be adjusted to the desired temperature.

7. For more options tap the **3 dot icon** on the upper-right corner of the app. Here you can Modify device name, Device location, Shared devices, Device info, Feedback, Check for firmware updates, Remove a device or Restore defaults.

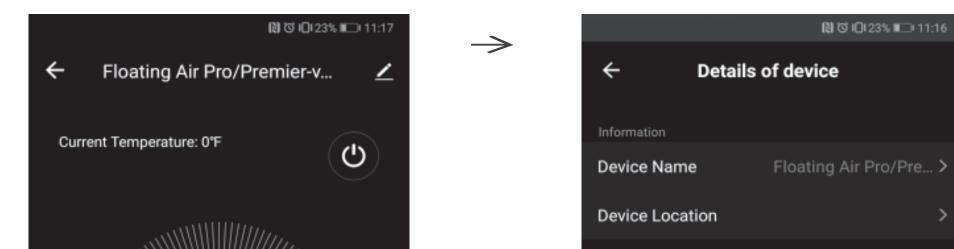

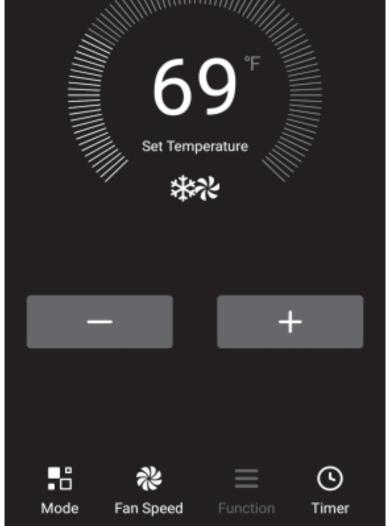

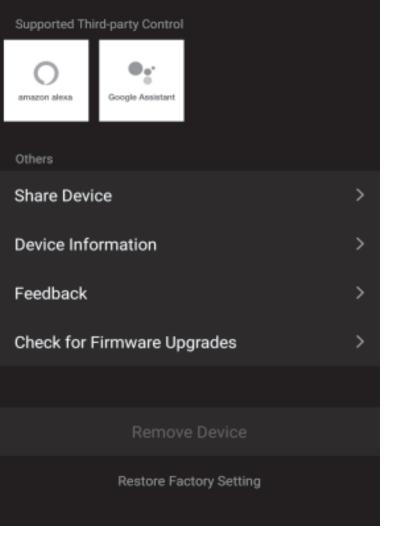

8. User profile, you can manage your personal information, User profile includes:

- a. Account information
- b. Scan QR code
- c. Message center will display any messages sent to the app.

9. Pattern unlock: Tap "Gesture unlock" under the personal center. Here you can set up an unlock pattern. Once

enabled, you will have to use pattern to unlock app.

Note: The first registered mobile device is the main control and other devices can only be shared through the primary device. Shared accounts need to be setup for the same country.

Troubleshootir	
Description	Analysis
Air Conditioner set up unsuccessful!	 Check that the Wi-Fi address and password is correct for the network you are trying to connect to. Check the air conditioner under configuration status. Check to make sure no firewalls or other restrictions are preventing setup on the wireless network. Check that the router is working properly. Make sure air conditioner, router and mobile device are all within signal range to connect. Check to see if the router is blocking the FriedrichGo App from connecting. Please note-The Friedrich Go App is supported on 2.4 GHZ Wi-Fi Channels only. Please be sure your connection is using a Wi-Fi channel broadcasting in
	 2.4GHz. Software display: Identification failed. This means that the air conditioner has been reset and the mobile device has lost the control permissions. Reconnection to the WI-FI network is required. If this does not fix the issue. Please delete the selected air conditioner in the app and reinstall.

Troubleshooting	
Description	Analysis
	Software display: Air
	conditioner is offline.
	Please check Wi-Fi
	network status.
	1. The air conditioner
	connection setting has
	been reconfigured or
	changed.
	2. No power to the air
Mobile	conditioner.
Device Car	1't 3. No power to the

Connect to the Air Conditioner

wireless router. Check all connection settings between the AC unit and router as well as the mobile device and router to be sure of connectivity. [IMPORTANT] Please choose the same connecting mode (CF or AP) as the Air-conditioner Display.