INSTALLATION INSTRUCTIONS

RETURN AIR GRILLE / ACCESS PANEL

LEFT and RIGHT Hinged

For Use With Vert-I-Pak and VRP07 Refer to Chassis Installation/Operation Manual for additional information.

Please read these instructions completely before attempting installation.

VPRG4R

Return Air Grille RIGHT HINGED



FRIEDRICH

RETURN AIR GRILLE / ACCESS PANEL

VPRG4/VPRG4R


Parts Included in this Kit

- VPRG4/VPRG4R Return Air Grille / Access Panel
 - (58" Tall x 29" Wide)
- 2x Mounting Bracket (left and right)
- Mounting Screws

Parts not Included in this Kit

- 25" x 20" Filter
- 5/32" Allen wrench for latch mechanism operation

Frame and sheetrock the access hole to 27" wide and $55^{3/4}$ " tall. The bottom of the opening should be at the same level as the floor or subbase. The chassis must fit thru this opening. The chassis is $23^{1/8}$ " wide and $32^{1/4}$ " or 47" tall (consult chassis specifications for actual dimensions).

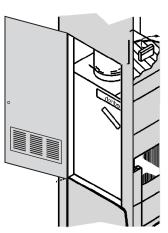

VPRG4 Return Air Grille LEFT HINGED

25" x 20" Nom. Filter (field supplied)

Side Bracket

Step 1

Determine the orientation of the door.


The VPRG4/VPRG4R Kit comes with two mounting hinges. For VPRG4, one of the hinges mounts to the left side of the opening and locates the return air openings at the lower portion of the door (View A).


The other mounts the hinge to the right side of the opening and locates the return air openings at the upper portion of the door (View B).

This provides an option for the direction that the door will open. In some cases, it can aid in sound attenuation by locating the return air openings away from the evaporator opening on the unit.

Follow STEPS 2A through 6A (next page) for left side mounting (View A)

Follow STEPS 2B through 6B (next page) for right side mounting (View B).

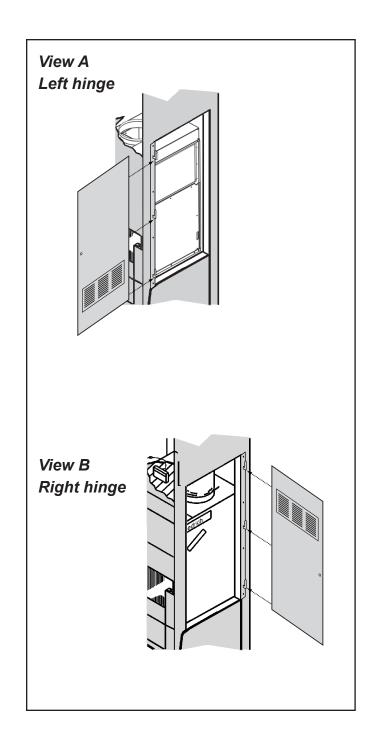


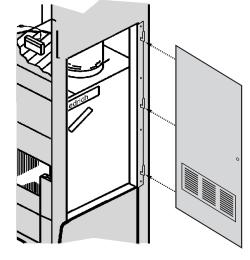

NOTE: VPRG4R is a right hinged door that locates the return air openings at the lower portion of the door. Follow the same installation method specified below.

Step 2A


Mount the Side Bracket to the left side of the wall opening. The Side Bracket must be plumb (vertical). Secure with four #8 x 1¹/₄" pan-head screws. NOTE: Hinge tabs must point upward.

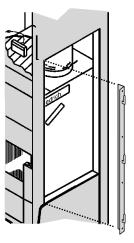

Mounting the Side Bracket


Step 4A

Close the door. Draw a temporary horizontal reference line on the wall adjacent to the center of the latch mounting hole.

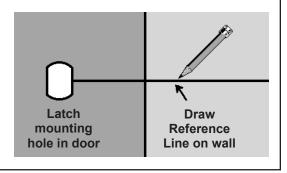

Step 6A


Slide the bracket upward and tighten the mounting screws.

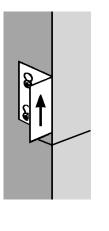

Installing Latch Bracket

Step 3A


Install door onto the Side Bracket. Be sure that the access door has engaged the three tabs, and the door is against the side mounting bracket.

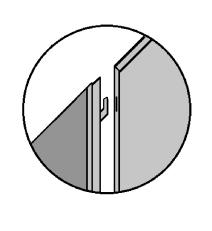

Mount the Door on the Side Bracket

Step 5A

Attach the latch bracket to the opening, aligning the bottom of the bracket with the reference line. Use two # $18 \times 1^{1/4}$ screws. Do not tighten.

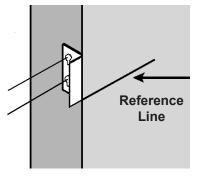


Latch Bracket Installation

Latch mechanism Access Panel NOTE: The latch mechanism should already be factory mounted. This assembly is shown for Latch Arm reference. The latch arm is adjustable to provide a secure, rattle-free <u>allia</u> installation. Install the filter. Latch Mechanism Orientation markings Side View **Front View** Mounting Latch

Step 2B


Mount the Side Bracket to the right side of the wall opening. The Side Bracket must be plumb (vertical). Secure with four #8 x 1¹/₄" pan-head screws. NOTE: Hinge tabs must point upward.

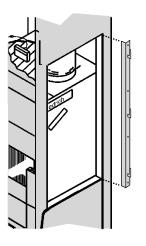

Mounting the Side Bracket


Step 4B

Close the door. Draw a temporary horizontal reference line on the wall adjacent to the center of the latch mounting hole.

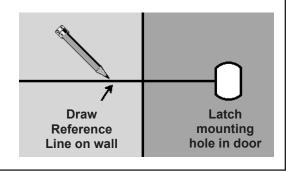

Step 6B


Slide the bracket downward and tighten the mounting screws.

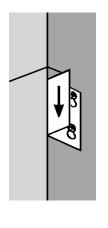

Installing Latch Bracket

Step 3B


Install door onto the Side Bracket. Be sure that the access door has engaged the three tabs, and the door is against the side mounting bracket.

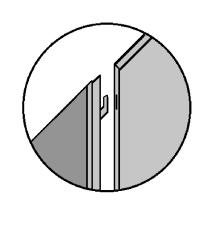

Mount the Door on the Side Bracket

Step 5B

Attach the latch bracket to the opening, aligning the bottom of the bracket with the reference line. Use two #18 x 1¹/₄ screws. Do not tighten.

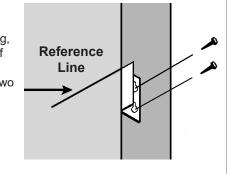

Latch Bracket Installation

Latch mechanism NOTE: The latch Access Panel mechanism should already be factory mounted. This assembly is shown for Latch Arm reference. The latch arm is adjustable to provide a secure, rattle-free installation. Install the filter. Latch Mechanism Orientation markings Side View **Front View** Mounting Latch